



LITTLE *green*®

COMPACT DEEP CLEANER
USER'S GUIDE

1400/1425 Series

2 Thanks / Consumer Services

3 Safety Instructions

4 Product View

5 This Guide / Features

6-8 Special Tools/Assembly

6-8 Operation

8-9 Clean-Up / Storage

10 Troubleshooting

11 Replacement Parts

12 About Your Warranty



 
Thanks for buying a BISSELL Little Green

We're glad you purchased a BISSELL Little Green. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your Little Green is well made, and we back it with a limited one-year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Services department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your Little Green.

Thanks again, from all of us at BISSELL.



Mark J. Bissell
President and Chief Executive Officer

BISSELL Consumer Services

For information about repairs or replacement parts, or questions about your warranty, call:

BISSELL Consumer Services
1-800-237-7691

Monday - Friday 8 a.m. — 10 p.m. EST

Saturday 9 a.m. — 8 p.m. EST

Or write:

BISSELL HOMECARE, INC

PO Box 3606

Grand Rapids MI 49501

ATTN: Consumer Services

Or visit the BISSELL website - **www.bissell.com**

When contacting BISSELL, have model number of unit available.

Please record your Model Number: _____

Please record your Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of date of purchase in the event of a warranty claim. See "About Your Warranty" on page 12 for details.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should be observed, including the following:

Read all instructions before using your LITTLE GREEN®

⚠ WARNING: To reduce the risk of fire, electric shock, or injury:

- Do not use for any purpose other than described in this User's Guide.
- Use only BISSELL cleaning products intended for use in this appliance.
- Use only manufacturer's recommended attachments.
- Do not expose to rain, store indoors.
- Do not handle LITTLE GREEN® plug or appliance with wet hands.
- Do not leave LITTLE GREEN® when it is plugged in.
- Do not put any object into appliance openings or use with blocked openings. Keep free of dust, lint, hair, and anything that may reduce air flow.
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts.
- Keep appliance on a level surface.
- Be extra careful when cleaning stairs.
- Do not carry the appliance while in use.
- Never spray at people or animals.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not pick up hot or burning objects.
- Do not pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in the presence of explosive liquids or vapor.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, gasoline, etc.).
- Do not use appliance in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, run appliance over cord, or expose cord to heated surfaces.
- Do not use with damaged cord or plug.
- Turn off all controls before unplugging.
- Unplug before attaching the TurboBrush.
- Unplug from outlet when not in use and before conducting maintenance and troubleshooting.
- Do not use LITTLE GREEN® if it has been dropped, damaged, left outdoors or dropped into water. Have it repaired at an Authorized Service Center.

- Unplug by grasping the plug, not the cord. Do not unplug by pulling on cord.
- Always connect to a properly grounded outlet; see grounding instructions.
- Do not modify the 3-prong grounded plug.


WARNING: The Power Cord on this product contains lead, a chemical known to the State of California to cause birth defects or other reproductive harm.

WASH HANDS AFTER HANDLING.

SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS

This appliance must be connected to a grounded wiring system. If it should malfunction or break down, grounding provides a safe path of least resistance for electrical current, reducing the risk of electrical shock. The cord for this appliance has an equipment-grounding conductor and a grounding plug. It must only be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

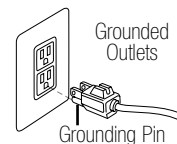

⚠ WARNING: Improper connection of the equipment-grounding conductor can result in a risk of electrical shock. Check with a qualified electrician or service person if you aren't sure if the outlet is properly grounded. **DO NOT MODIFY THE PLUG.** If it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is designed for use on a nominal 120-volt circuit, and has a grounding attachment plug that looks like the plug in the drawing above. Make certain that the appliance is connected to an outlet having the same configuration as the plug. No plug adapter should be used with this appliance.


This model is for household use only.

800.237.7691

3

www.bissell.com



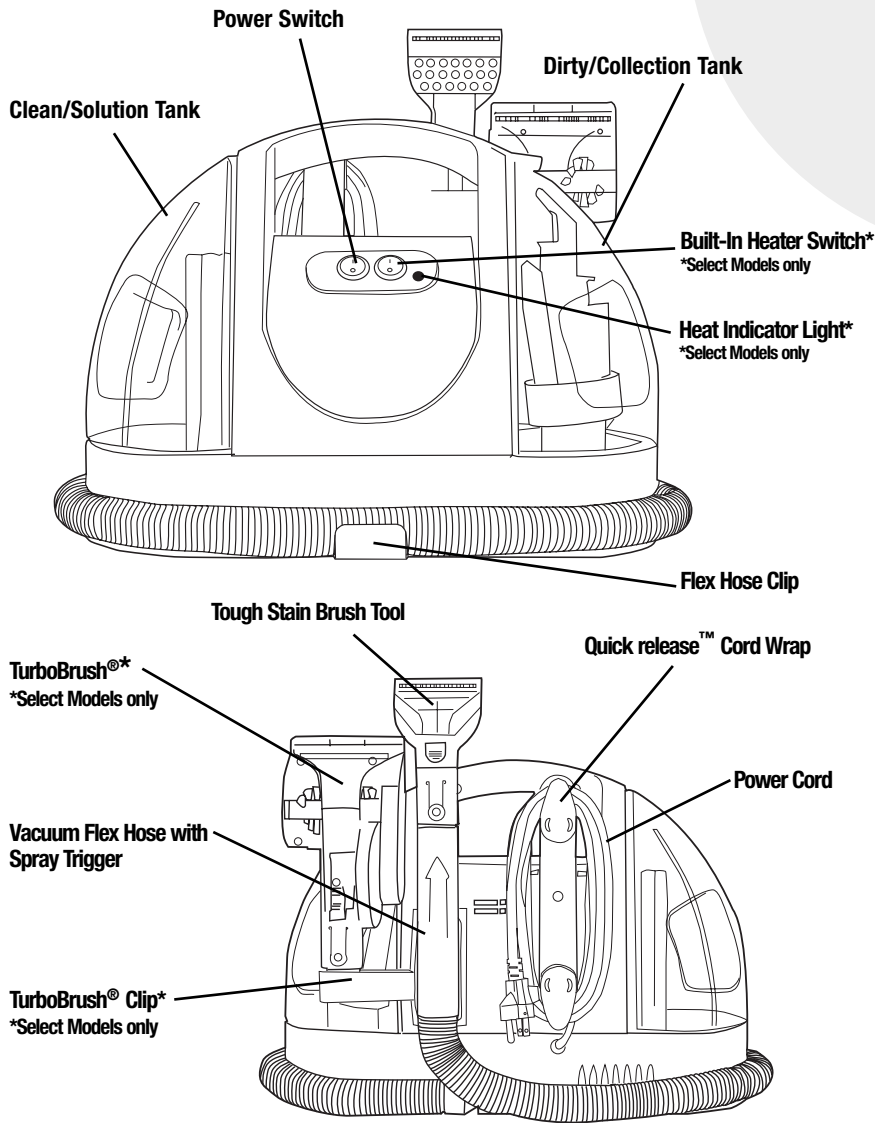


Optional Accessories:


These items are available for purchase with your model. To order replacement parts or additional tools or formulas, please refer to page 11.



 4" Tool



6" Tool

 

TurboBrush



Spraying Crevice



32 oz. Little Green® Formula



32 oz. Pet Odor & Stain Removal™ Formula
800.237.7691



How To Use This Guide

Please read this Guide thoroughly before assembling your cleaner. Pay particular attention to the product diagram, assembly instructions, and part names.

1. Begin by locating and organizing all parts before assembly.
2. Familiarize yourself with the parts and where they go.

Little Green® Product Features

Following this User's Guide will let you get the best performance from your BISSELL Little Green for many years.

Clean/Solution Tank

The Clean/Solution Tank is the tank to your left as you face the unit looking at the black power switch.

Dirty/Collection Tank

The Dirty/Collection Tank is the tank to your right as you face the unit looking at the black power switch.

Built-In Heater Switch (Red)

The Little Green ProHeat® models give you the ability to raise the water temperature for improved cleaning performance based on your cleaning needs.

Heat Indicator Light (ProHeat models only)

After turning the Built-In Heater Switch on, the Heat Indicator Light will illuminate, indicating the heater has reached the correct temperature.

Flex Hose Clip

The clip guides the storage of the vacuum flex hose around the unit.

TurboBrush Clip (select models only)

Attaches to the unit for storage of the TurboBrush.

Tough Stain Brush

The standard tool that attaches to the Vacuum Flex Hose.

Quick Release Cord Wrap

To remove the Power Cord, gently twist/rotate the Quick Release Cord Wrap clockwise.

Little Green® Product Features (Continued)

Power Cord

The Power Cord, with a three-prong plug, stores on the back of the Little Green by wrapping around the Quick-Release Cord Wrap.

NOTE: Unwrap the Power Cord completely before operating the unit.



WARNING:

Do not use an extension cord with this product. The use of an extension cord may result in a severe electrical shock, particularly if the extension cord does not have an electrical rating higher than that of the product, OR if the extension cord does not have a three-prong grounding plug and if the extension cord is not plugged into a circuit box with a ground fault circuit interrupter. Safety precautions such as keeping all connections off the ground and dry will not eliminate the danger.



WARNING:

Do not use this product while on any type of ladder. Do not place the product in a place where it will be stepped on or kicked while in use. Do not place the product on an elevated surface where it may be pulled off the surface while in use.



WARNING:

Use only BISSELL Little Green formula in your cleaner. Use of cleaning formulas which contain lemon or pine oil may damage this appliance and void the warranty. Chemical spot cleaners or solvent-based soil removers also should not be used. These products may react with the plastic materials used in your cleaner, causing cracking or pitting.

Putting It Together


Assembling your Little Green is a simple process.

1. Take the Flex Hose Clip and slide the back plate into the opening on the front of the unit. You will hear a "snap" when it is locked in place.


If your model includes a TurboBrush,

2. Slide the TurboBrush Clip into the guides on the Vacuum Flex Hose storage bracket, on the back of the unit.

1

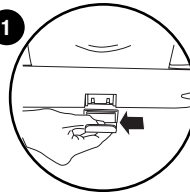

2

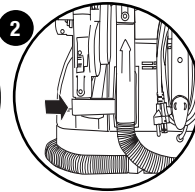


Getting Ready

- To Fill the Clean/Solution Tank.
 - Remove the tank by lifting it straight up and then away from the unit.
 - Unscrew the black cap at the bottom of the Clean/Solution Tank.
 - Add BISSELL Little Green Formula to the FORMULA fill line (8 oz.) on the Clean/Solution Tank. Fill the Clean/Solution Tank with hot (NOT boiling) tap water to the WATER fill line. Replace and tighten the black cap.
 - Replace the Clean/Solution Tank by lining up the vertical guides on the left side of the unit with the indentations on the Clean/Solution Tank and gently sliding it down into position.
- Unwrap Vacuum Flex Hose completely from Onboard Hose Storage.
- Attach your selected cleaning tool to the Spray Trigger Unit by pressing tool onto Spray Trigger firmly until the button lock snaps into hole. Make certain the tool is securely attached.
- Twist the Quick Release Cord Wrap clockwise to unwrap the Power Cord completely from Onboard Cord Storage and plug into 120 Volt, 60 Hz grounded outlet as described in Important Safety Instructions, page 3.
- Press Power Switch to ON Position.
NOTE: If your unit has a built-in heater (not standard on all models), first turn the black power switch to "ON," then the red heater switch to "ON". Within 30 seconds, the Heat Indicator light will illuminate, indicating the heater has reached the proper temperature. Begin by pressing the Spray Trigger for 5-10 seconds to allow the non-heated water to travel through the heater. Now the heated water and cleaning solution mixture are ready to clean carpet or upholstery. See below for detailed cleaning instructions.
- Press and hold Spray Trigger—spray will start in a few seconds. Raise the tool slightly to check for spray.

Pre-Treating


Cleaning effectiveness will be enhanced if you pre-treat heavily stained or highly-soiled areas. Here's how to do it:

- Hold the Cleaning Tool just above the surface of the carpet or upholstery to be cleaned. Press the trigger to release a spray of cleaning solution directly onto the soiled area.
- Wait 3-5 minutes before cleaning.

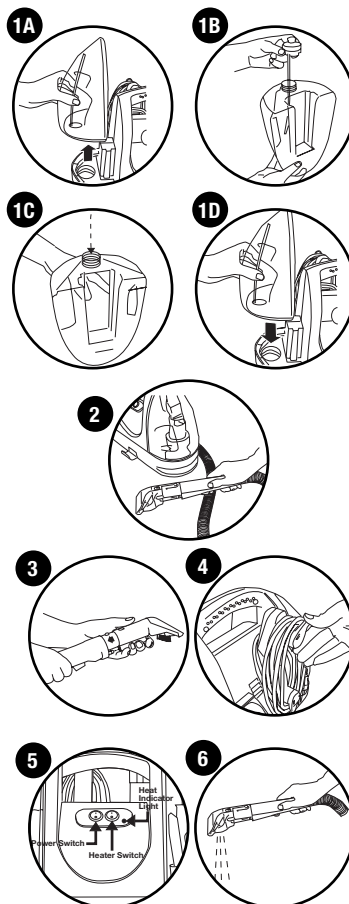

Cleaning with your Little Green

1. Hold the tool approximately 1" above the soiled surface. Press the Spray Trigger to apply the cleaning solution to the soiled area.
2. Using the brush on the tool, gently scrub the area to be cleaned.
Note: If using the TurboBrush, the switch should be in the "BRUSH" position. This activates the brush only.
3. For thorough cleaning, spray additional solution, while the brush and suction are in contact with the surface.
4. Apply downward pressure on the tool and pull it toward you. The suction will remove the dirt and cleaning solution. Continue until no more dirt can be removed.
Note: If using the TurboBrush, move the switch to the "SUCTION" position. This activates the suction to remove the dirt and cleaning solution. Move the switch back to the "BRUSH" position for additional brushing action.
5. As a final step, use "drying strokes" (by not pressing the Spray Trigger) to remove as much liquid/moisture as possible. Repeat this step as often as necessary.
Note: If using the TurboBrush, move the switch to the "SUCTION" position. This activates the suction to remove the dirt and cleaning solution.

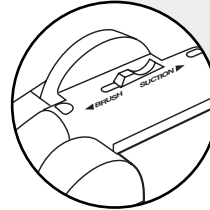

IMPORTANT:

Check the manufacturer's tag before cleaning upholstery. "W" or "WS" on the tag means you can use your Little Green. If tag is coded with an "S" (with diagonal strike-through), or says "Dry Clean Only," do not proceed. If manufacturer's tag is missing or not coded, check with your furniture dealer.

Tip:

Deep cleaning stairs and high-traffic areas on a regular basis can prolong carpet life.

Tip:


Check upholstery stuffing before cleaning. Colored stuffing may bleed through the fabric when it becomes wet.

Tip:

Before turning off the Little Green, vacuum up clean water to thoroughly rinse out the interior of the Vacuum Flex Hose. Then, lift the cleaning tool and point it upwards to drain any remaining water into the Dirty/Collection Tank.

After Cleaning

1. Turn Power Switch to OFF position.
Note: If your unit has a Built In Heater turn the Heater Switch off.
2. Unplug Power Cord from outlet.
Note: If a significant amount of Little Green formula/water remains, it is all right to leave it in the Clean/Solution Tank for your next cleaning task.
3. Empty and rinse the Dirty/Collection Tank after each use, OR when dirty water reaches the indicated maximum fill line. To remove the tank, lift up the Dirty/Collection Tank retainer lever and remove the tank from the unit.

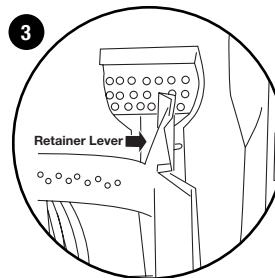

After Cleaning (continued)

4. Disconnect the cleaning tool from the Spray Trigger by pushing down on button lock and pulling straight off
(Do NOT twist tools to remove them)
5. Once removed from the Spray Trigger, all tools can be cleaned by rinsing under clean running water. The TurboBrush tool's switch must be in "SUCTION" position before rinsing under clean running water.
6. Check Spray Nozzle for accumulated dirt or debris. If necessary, clean with soft bristle brush.

 **WARNING:**
Keep spray away from face.
Failure to do so may result in
personal injury.

Machine Storage

1. Wipe all surfaces with a soft cloth.
2. Wrap Power Cord around the Cord Wrap on the back of the Little Green.
3. Wrap Vacuum Flex Hose around the base of the unit and secure the Spray Trigger.
4. Store unit in protected, dry area, at room temperature (40° to 110°F).

Note: For Little Green TurboBrush Models, onboard storage for the TurboBrush Tool has been provided on the back of the unit. Attach the TurboBrush to the unit by pressing it onto the holder firmly until the button snaps into hole.

Troubleshooting

Water & Formula are draining out from the clean tank

Possible Causes

1. Power cord not plugged in
2. Blown fuse/tripped breaker

Remedies

1. Check electrical plug
2. Replace household fuse or reset breaker

Reduced spray or no spray

Possible Causes

1. Spray Nozzle clogged
2. Clean/Solution Tank empty
3. Clean/Solution Tank insert clogged

Remedies

1. Clean Spray Nozzle
2. Check/Refill Tank
3. Clean insert at bottom of Clean/Solution Tank
4. Gently lift Clean/Solution Tank while depressing the Spray Trigger OR Gently squeeze clean tank while depressing Spray Trigger

4. Pump needs priming

Deep Cleaner won't pick up cleaning solution

Possible Causes

1. Poor Upholstery/Carpet Tool position
2. Dirty/Collection Tank is full
3. Upholstery/Carpet Tool Brush worn
4. Excess solution in Vacuum Flex Hose

Remedies

1. Reposition Upholstery/Carpet Tool on surface, follow recommended cleaning procedures
2. Empty Dirty/Collection Tank
3. Replace with new Brush
4. Lift Tool and point upwards to allow water in Hose to flow into the Dirty/Collection Tank
5. Use BISSELL Little Green formula only

5. Incorrect Cleaning Formula

TurboBrush attachment-Brush will not turn

Possible Causes

1. Incorrect switch position on TurboBrush

Remedies

1. Reposition switch to Brush position

TurboBrush attachment- No Suction

Possible Causes

1. Incorrect switch position on TurboBrush

Remedies

1. Reposition switch to Suction position

**Thank you for selecting a BISSELL product.
Please do not return this product to the store**

For any question or concern, BISSELL is happy to be of service.


Contact us directly at 1-800-237-7691

Replacement parts -

Item	Part No.	Part Name
1	203-6868	4" Upholstery/Carpet Tool- Dusk
2	203-6869	6" Upholstery/Carpet Tool - Dusk
3	203-6872	Spraying Crevice Tool - Dusk
4	314-9162	Tough Stain Brush Tool- Dusk
5	203-6652	TurboBrush - Dusk
6	203-5008	Clean/Solution Tank (includes cap and insert assembly)
7	203-5009	Collection/Dirty Tank (includes the airstack and float assembly)
8	203-5011	Quick Release Cord Wrap
9	203-5012	TurboBrush Clip
10	203-5013	Flex Hose Clip
11	203-5014	Cap & Insert Assembly

CLEANING FORMULAS

12	497	64 oz. Little Green® Formula
13	499	32 oz. Little Green® Formula
14	797	64 oz Pet Odor & Stain Removal® Formula
15	799	32 oz Pet Odor & Stain Removal® Formula

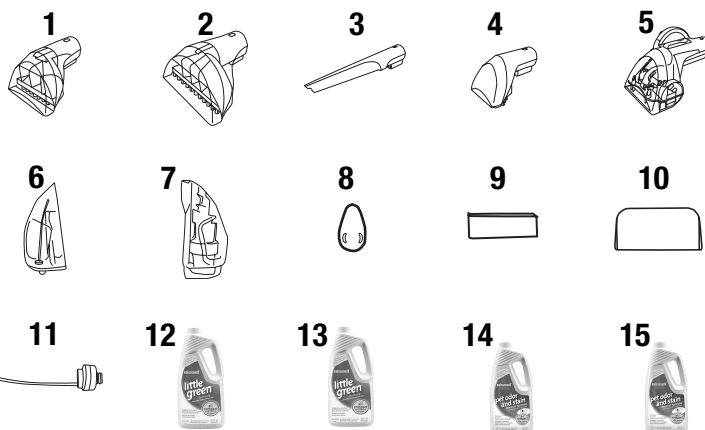

Warranty - BISSELL Little Green

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Services by E-mail, telephone, or regular mail as described below.

Limited One Year Warranty

Subject to the ***EXCEPTIONS AND EXCLUSIONS** identified below, upon receipt of the product BISSELL Homecare, Inc. will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for one year any defective or malfunctioning part.

See information below on "If your BISSELL product should require service".

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered.

NOTE: Please keep your original sales receipt. It provides proof of date of purchase in the event of a warranty claim.

If your BISSELL product should require service:

Contact BISSELL Consumer Services to locate a BISSELL Authorized Service Center in your area.

If you need information about repairs or replacement parts, or if you have questions about your warranty, contact BISSELL Consumer Services.

Website or E-mail:

www.bissell.com

Use the "Customer Services" tab.

Or Call:

BISSELL Consumer Services

1-800-237-7691

Monday - Friday 8 a.m. - 10 p.m. ET

Saturday 9 a.m. - 8 p.m. ET

Or write:

BISSELL Homecare Inc.

PO Box 3606

Grand Rapids MI 49501

ATTN: Consumer Services

BISSELL HOME CARE, INC. IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE ONE YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

NOTE: Please keep your original sales receipt. It provides proof of date of purchase in the event of a warranty claim



©2006 BISSELL Homecare, Inc.
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 603-2307
Rev 02/06
Visit our website at:
www.bissell.com

