

INDUS-TOOL

Safe Home Products
3578 Perch Dr SE
Iowa City, IA 52240

Phone 319-358-0900
FAX 319-358-0901
E-mail sales@safehomeproducts.com
www.safehomeproducts.com

COZY LEGS Instructions

MOUNTING: Using the alcohol wipes, clean surfaces of both Cozy Legs and desk panel where adhesive locking pads will be affixed. (Note: all locking loops are the same — not male/female) Remove adhesive backing from two pads and stick them on the Cozy Legs (½” from the top edge of Cozy Legs with the long side of the pads parallel with the top edge.) Without removing the adhesive backing from the two pads that will mount to the desk panel, press them to the two pads already mounted on the Cozy Legs. Remove the adhesive backing and firmly secure assembly to desk panel.

CAUTION: Mount vertically. Do not use directly on floor or in horizontal position.

CLEANING: Unplug unit and wipe with a damp cloth.

OPTIONAL MOUNTING WITH ACCESSORY: Metal floor stand for mounting Cozy Legs where desk panel is not available or desired (part #CLS).



TOASTY TOES Instructions

ASSEMBLY/PLACEMENT: Use product with raised-pattern side facing out. There are three positions for use.

1. As a mat. Position the Toasty Toes flat on the floor, without attaching the base pieces.
2. As a Footrest. Turn the Toasty Toes upside down and place it flat on a surface with the cord protruding toward you. Turn one foot upside down with the *larger* of the two keyhole slots away from you. Position it over one of the black knobbed protrusion and slide it up to the middle of the slot. Repeat on the other side. Turn Toasty Toes right-side up and adjust the angle to your preference.
3. As a vertical Heat Panel (feet will not be resting on it). Attach the feet as in option 2. Continue sliding each foot up until it locks into the *smaller* of the two keyhole slots. Turn Toasty Toes right-side up and position it vertically near your feet.

Select OFF, FOOTREST (when choosing option 1 or 2) or HEAT PANEL (when choosing option 3) at your preference.

NOTE: “HEAT PANEL” is a higher temperature, as your feet will not be in direct contact with the Toasty Toes.

CAUTION: Never place objects other than your feet on Toasty Toes, including household pets, cloth, chairs, desks, etc... This could cause overheating or puncturing of the product.

CLEANING: Unplug unit and wipe with a damp cloth.

COZY TOES Instructions

PLACEMENT: Use product, placed horizontally, with gray carpeted side up only.

CAUTION: Never place objects other than your feet on Cozy Toes, including household pets, cloth, chairs, desks, etc... This could cause overheating or puncturing of the product.

CLEANING: Unplug unit and use a dry carpet cleaner and vacuum.

OPTIONAL ACCESSORY FOR COZY LEGS and COZY TOES MODELS

HI-LO SWITCH AND POWER CONNECTION Plug Cozy Legs or Cozy Toes into the HI-LO switch “piggy-back” plug and then plug the assembly into a 120 VAC outlet. The HI position yields 150 watts output. The LO position yields 75 watts output. The center position turns the product OFF. Peel the backing from the adhesive pad on the back of the HI-LO switch and mount it in a convenient location. Part #HI-LO.



WARRANTY (ALL MODELS): This product is warrantied against defects in materials and workmanship for a period of six months from the shipping date. At the option of Indus-Tool, we will either replace or repair the defective unit.

WARNING (ALL MODELS): Take care to determine prior to use whether this device is suitable, adequate or safe for the use intended. Since individual applications are subject to great variation, the manufacturer makes no representation or warranty as to suitability or fitness of these devices for any specific application. While product includes an overtemperature regulator, misuse may cause failure, damaging the product, mounting surface or work area. Use in a dry area; avoid exposure to moisture. Mount free from materials that hinder the transfer of heat. Do not drape or cover product with any material. Always allow heat to escape. Protect from puncture. Turn off when not in use.

CAUTION (ALL MODELS): To reduce the risk of electric shock these plugs will only fit into a polarized outlet one way. If a plug does not fit fully into the outlet, reverse it. If it still does not fit, contact a qualified electrician. **Do not modify the plug in any way.**