



CARAFE FITS LIST

Betty Crocker	BC1732	4 Cup: GL204 4 Cup: SS404
Betty Crocker	BC1734	4 Cup: GL204 4 Cup: SS404
Black & Decker	DCM1200	12 Cup: GL220
Black & Decker	DCM1300	12 Cup: GL220
Black & Decker	DCM1330	12 Cup: GL220
Black & Decker	DCM1350	12 Cup: GL220
Black & Decker	DCM1400	12 Cup: GL312
Black & Decker	DCM18S	n/a single serve
Black & Decker	DCM2500	GL312
Black & Decker	DCM3200	12 Cup: GL312
Black & Decker	DCM400	4 Cup: GL204 4 Cup: SS404
Black & Decker	DCM500	no fit
Black & Decker	DCM580	no fit
Black & Decker	DCM675BMT	4 Cup: GL204 4 Cup: SS404
Black & Decker	DCM900-04	10 Cup: GL210 10 Cup: SS410 12 Cup: GL200
Black & Decker	DCM901-04	12 Cup: GL212 12 Cup: SS412
Black & Decker	DCM902	10 Cup: GL210 10 Cup: SS410 12 Cup: GL200
Black & Decker	DCM903	12 Cup: GL212 12 Cup: SS412

Black & Decker	DCM-90WH	10 Cup: GL210 10 Cup: SS410 12 Cup: GL200
Black & Decker	DE790B	12 Cup: GL312
Black & Decker	DLX850	12 Cup: GL312
Black & Decker	GT300	n/a no carafe
Black & Decker	HCC100	n/a no carafe
Black & Decker	ODC150	10 Cup: GL210 10 Cup: SS410
Black & Decker	ODC25N	12 Cup: GL200
Black & Decker	ODC325	12 Cup: GL200
Black & Decker	ODC405	12 Cup: GL200
Black & Decker	ODC425	no fit
Black & Decker	ODC440	12 Cup: GL200
Black & Decker	ODC450	no fit
Black & Decker	SDC1	10 Cup: GL210 10 Cup: SS410 12 Cup: GL200
Black & Decker	SDC1D	12 Cup: GL200
Black & Decker	SDC2	10 Cup: GL210 10 Cup: SS410 12 Cup: GL200
Black & Decker	SDC2A	10 Cup: GL210 10 Cup: SS410 12 Cup: GL200
Black & Decker	SDC2AG	12 Cup: GL200
Black & Decker	SDC3	12 Cup: GL200

Black & Decker	SDC3A	12 Cup: GL200
Black & Decker	Smartbrew DCM2000	12 Cup: GL212, GL312, GL220 remove pause and serve
Black & Decker	Spacemaker Models	10 Cup: GL210 10 Cup: SS410 12 Cup: GL200
Black & Decker	SR10	12 Cup: GL200
Black & Decker	TCM700	n/a thermal carafe
Black & Decker	TCM805	n/a thermal carafe
Black & Decker	TCM830	n/a Thermal
Braun	650	12 Cup: GL212 12 Cup: SS412
Braun	800	12 Cup: GL212 12 Cup: SS412
Braun	600BUA	12 Cup: GL212 12 Cup: SS412
Braun	800BGFUA	12 Cup: GL212 12 Cup: SS412
Braun	800BUA	12 Cup: GL212 12 Cup: SS412
Braun	Aromaster	10 Cup: GL210 10 Cup: SS410 12 Cup: GL212
Braun	BGABT	12 Cup: GL200
Braun	E20	Espresso: EXP100
Braun	E25	Espresso: EXP100
Braun	E40	Espresso: EXP100
Braun	E45	Espresso: EXP100



CARAFE FITS LIST

Braun	E600	Espresso: EXP100
Braun	E650	Espresso: EXP100
Braun	KF10	4 Cup: GL204 4 Cup: SS404
Braun	KF12	4 Cup: GL204 4 Cup: SS404
Braun	KF140	no fit
Braun	KF32	10 Cup: GL210
Braun	KF37	10 Cup: GL210
Braun	KF40	10 Cup: GL210 10 Cup: SS410
Braun	KF400	10 Cup: GL210 10 Cup: SS410
Braun	KF42	10 Cup: GL210 10 Cup: SS410
Braun	KF420	4 Cup: GL204 4 Cup: SS404
Braun	KF45	10 Cup: GL210 10 Cup: SS410
Braun	KF450	10 Cup: GL210 10 Cup: SS410
Braun	KF580	no fit
Braun	KF60	12 Cup: GL212 12 Cup: SS412
Braun	KF600	10 Cup: GL210 10 Cup: SS410
Braun	KF65	12 Cup: GL212 12 Cup: SS412
Braun	KF650	12 Cup: GL212

Braun	KF655	12 Cup: GL212
Braun	KF67	12 Cup: GL212
Braun	KF675	12 Cup: GL212
Braun	KF80	12 Cup: GL212 12 Cup: SS412
Braun	KF800	10 Cup: GL210 10 Cup: SS410
Breville	800ESXL	Espresso: EXP100
Breville	ESP8XL	Espresso: EXP100
Bunn	A10	10 Cup: GL210 10 Cup: SS410
Bunn	B8/B10	10 Cup: GL210 10 Cup: SS410
Bunn	BGABT	12 Cup: GL200
Bunn	BT10	10 Cup: GL210 12 Cup: GL212
Bunn	BTX	10 Cup: GL210
Bunn	BTX	10 Cup: GL210 12 Cup: GL212
Bunn	BX	10 Cup: GL210 10 Cup: SS410
Bunn	GR Series	10 Cup: GL210 10 Cup: SS410 12 Cup: GL200
Bunn	GRX	10 Cup: GL210 10 Cup: SS410
Bunn	GT10	10 Cup: GL210 10 Cup: SS410
Bunn	NHB	12 Cup: GL212 12 Cup: SS412

Bunn	NHBX	10 Cup: GL210 10 Cup: SS410
Bunn	POUR-O-MATIC	10 Cup: GL210 10 Cup: SS410 12 Cup: GL200
Capresso	301	Espresso: EXP100
Cuisinart	DCC-1000	12 Cup: GL312
Cuisinart	DCC-1000BK	12 Cup: GL312
Cuisinart	DCC-1100BK	12 Cup: GL312
Cuisinart	DCC-1150BK	n/a Thermal
Cuisinart	DCC-1200	12 Cup: GL312
Cuisinart	DCC-1200BCH	12 Cup: GL312
Cuisinart	DCC-1200BW	12 Cup: GL312
Cuisinart	DCC-1200W	12 Cup: GL312
Cuisinart	DCC-200	12 Cup: GL220
Cuisinart	DCC-2200	12 Cup: GL312 (14 cup coffeemaker)
Cuisinart	DCC-450	4 Cup: GL204
Cuisinart	DGB-500	12 Cup: GL312
Cuisinart	DGB-500BK	12 Cup: GL312
Cuisinart	DGB-500R	12 Cup: GL312
Cuisinart	DGB-600BC	12 Cup: GL312



CARAFE FITS LIST

Cuisinart	DGB-700BC	12 Cup: GL312
Cuisinart	DGB-900BC	Thermal Carafe 12 Cup: GL312
Cuisinart	DTC975	thermal carafe, no fit
DeLonghi	BAR4EE	Espresso: EXP100
DeLonghi	BCO60	Espresso: EXP100
DeLonghi	DCF212T	12 Cup: GL312
Gaggia	BABY	Espresso: EXP100
Gaggia	CLASSIC	Espresso: EXP100
Gaggia	COFFEE	Espresso: EXP100
Gaggia	ESPRESSO	Espresso: EXP100
GE	106591	12 Cup: GL220
GE	106702	12 Cup: GL220
GE	106718	12 Cup: GL220
Hamilton Beach	40304	12 Cup: GL312
Hamilton Beach	40515	n/a Party Perk
Hamilton Beach	40729	Espresso: EXP100
Hamilton Beach	43251	12 Cup: GL312
Hamilton Beach	43253	12 Cup: GL312

Hamilton Beach	43254	12 Cup: GL220
Hamilton Beach	43424	no fit
Hamilton Beach	44559	12 Cup: GL312
Hamilton Beach	45224	n/a thermal carafe
Hamilton Beach	45237	n/a single serve
Hamilton Beach	47214	n/a single serve
Hamilton Beach	47224	n/a single serve
Hamilton Beach	47454	n/a single serve
Hamilton Beach	47665	n/a single serve
Hamilton Beach	48131	4 Cup: GL204
Hamilton Beach	48134	4 Cup: GL204
Hamilton Beach	49121	12 Cup: GL220
Hamilton Beach	49124	12 Cup: GL220
Hamilton Beach	49281	12 Cup: GL220
Hamilton Beach	49284	12 Cup: GL220
Hamilton Beach	49291	12 Cup: GL220
Hamilton Beach	49294	12 Cup: GL220
Hamilton Beach	49465	12 Cup: GL212

Hamilton Beach	43244C	12 Cup: GL312
Hamilton Beach	Mini Drip HB784	4 Cup: GL204 4 Cup: SS404
Jerdon	CM101W	4 Cup: GL204 4 Cup: SS404
Jerdon	CM103B	4 Cup: GL204 4 Cup: SS404
Keurig	B40	n/a single serve
Kitchen Selectives	CM202	12 Cup: GL312
KitchenAid	KCM414OB	n/a can't test -- no sample available
KitchenAid	KCM511	10 Cup: GL210 or GL200 remove pause and serve
KitchenAid	KCM5250	n/a thermal carafe
KitchenAid	KCM534ER	14 Cup: GL220
Krups	121	12 Cup: GL212
Krups	131	12 Cup: GL212
Krups	140	10 Cup: GL210 10 Cup: SS410
Krups	141	12 Cup: GL212
Krups	149	10 Cup: GL210 10 Cup: SS410
Krups	160	12 Cup: GL212
Krups	165	12 Cup: GL212
Krups	182	12 Cup: GL212



CARAFE FITS LIST

Krups	201	12 Cup: GL212
Krups	212	12 Cup: GL212
Krups	312	12 Cup: GL212
Krups	313	12 Cup: GL212
Krups	452	12 Cup: GL212 12 Cup: GL220
Krups	453	12 Cup: GL212
Krups	864	Espresso: EXP100
Krups	865	Espresso: EXP100
Krups	866	Espresso: EXP100
Krups	868	Espresso: EXP100
Krups	871	Espresso: EXP100
Krups	872	Espresso: EXP100
Krups	882	Espresso: EXP100
Krups	933	Espresso: EXP100
Krups	963	Espresso: EXP100
Krups	967	Espresso: EXP100
Krups	968	Espresso: EXP100
Krups	971	Espresso: EXP100

Krups	972	Espresso: EXP100
Krups	985	Espresso: EXP100 8 Cup: GL210 remove pause and serve
Krups	987	Espresso: EXP100
Krups	993	Espresso: EXP100
Krups	1340	12 Cup: GL212 12 Cup: SS412
Krups	1350	12 Cup: GL212 12 Cup: SS412
Krups	1370	12 Cup: GL212 12 Cup: SS412
Krups	FME2-11	12 Cup: GL312
Krups	FME2-14	12 Cup: GL312
Krups	FME4	12 Cup: GL312
Krups	FME4-14	12 Cup: GL312
Krups	FMF 5	12 Cup: GL312
Krups	FMF 5-14	12 Cup: GL312
Krups	FND111	Espresso: EXP100
Krups	KM1000	12 Cup: GL212
Krups	T027	Espresso: EXP100
Krups	XP2070	Espresso: EXP100 12 Cup: GL220
Krups	XP4030	Espresso: EXP100

Melitta	ACM10	10 Cup: GL210 10 Cup: SS410 12 Cup: GL212 12 Cup: SS412
Melitta	ACM10A4	10 Cup: GL210 10 Cup: SS410
Melitta	ACM10B4	10 Cup: GL210 10 Cup: SS410
Melitta	ACM10E4	10 Cup: GL210 10 Cup: SS410
Melitta	ACM10G	12 Cup: GL200
Melitta	ACM10G4	10 Cup: GL210 10 Cup: SS410
Melitta	ACM10H	10 Cup: GL210 10 Cup: SS410
Melitta	ACM10M/4	10 Cup: GL210 10 Cup: SS410
Melitta	ACM10MI/4	10 Cup: GL210 10 Cup: SS410
Melitta	ACO12T	12 Cup: GL200 12 Cup: GL220
Melitta	ACP12	12 Cup: GL200 12 Cup: GL220
Melitta	ME2DMCBT	n/a no carafe
Melitta	ME2TMB	n/a single serve
Melitta	MEMB1B	not yet checked
Moulinex	85	Espresso: EXP100
Moulinex	86	Espresso: EXP100
Moulinex	985	Espresso: EXP100
Moulinex	W50	Espresso: EXP100



CARAFE FITS LIST

Mr. Coffee	AD10	10 Cup: GL210 10 Cup: SS410
Mr. Coffee	AD12	12 Cup: GL220
Mr. Coffee	AR10	12 Cup: GL220
Mr. Coffee	AR11	12 Cup: GL220
Mr. Coffee	AR4	4 Cup: GL204 4 Cup: SS404
Mr. Coffee	ARX10	12 Cup: GL220
Mr. Coffee	ARX20	12 Cup: GL220
Mr. Coffee	ARX23	12 Cup: GL220
Mr. Coffee	BL110	4 Cup: GL204 4 Cup: SS404
Mr. Coffee	BL113	12 Cup: GL220
Mr. Coffee	BL213	4 Cup: GL204 4 Cup: SS404
Mr. Coffee	BL4	4 Cup: GL204 4 Cup: SS404
Mr. Coffee	BL5	4 Cup: GL204 4 Cup: SS404
Mr. Coffee	BL6	4 Cup: GL204 4 Cup: SS404
Mr. Coffee	BLX210	12 Cup: GL220
Mr. Coffee	BLX213	12 Cup: GL220
Mr. Coffee	BVX23	12 Cup: GL312
Mr. Coffee	CBS700	10 Cup: GL210 10 Cup: SS410

Mr. Coffee	CBS900	10 Cup: GL210 10 Cup: SS410
Mr. Coffee	CBTU45	n/a party perk
Mr. Coffee	CCX20	12 Cup: GL220
Mr. Coffee	CG12	12 Cup: GL312
Mr. Coffee	CGX20	12 Cup: GL312
Mr. Coffee	CM10	10 Cup: GL210 10 Cup: SS410 12 Cup: GL200
Mr. Coffee	CMX1000	10 Cup: GL210 10 Cup: SS410
Mr. Coffee	CMX15	10 Cup: GL210 10 Cup: SS410
Mr. Coffee	CMX20	10 Cup: GL210 10 Cup: SS410
Mr. Coffee	CMX400	12 Cup: GL200
Mr. Coffee	CMX55	12 Cup: GL200
Mr. Coffee	DR12	12 Cup: GL312
Mr. Coffee	DR13	12 Cup: GL312
Mr. Coffee	DR4	4 Cup: GL204
Mr. Coffee	DRTX84	n/a thermal carafe
Mr. Coffee	DRX20	12 Cup: GL312
Mr. Coffee	DRX23	12 Cup: GL312
Mr. Coffee	DRX5	no fit

Mr. Coffee	DRX5	4 Cup: GL204
Mr. Coffee	DSP10	10 Cup: GL210 10 Cup: SS410 12 Cup: GL200 12 Cup: GL220
MR. Coffee	EC5	no fit
Mr. Coffee	ECM10	Espresso: EXP100
Mr. Coffee	ECM13	Espresso: EXP100
Mr. Coffee	ECM15	Espresso: EXP100
Mr. Coffee	ECM150	Espresso: EXP100
Mr. Coffee	ECM2	Espresso: EXP100
Mr. Coffee	ECM20-23	Espresso: EXP100
Mr. Coffee	ECM3	Espresso: EXP100
Mr. Coffee	ECM7	Espresso: EXP100
Mr. Coffee	ECM8	Espresso: EXP100
Mr. Coffee	ECM9	Espresso: EXP100
Mr. Coffee	ECM91	Espresso: EXP100
Mr. Coffee	ECMP50	Espresso: EXP100
Mr. Coffee	Elite Models	12 Cup: GL220
Mr. Coffee	ES10	12 Cup: GL212
Mr. Coffee	ES11	12 Cup: GL212



CARAFE FITS LIST

Mr. Coffee	ESX10	12 Cup: GL212
Mr. Coffee	ESX11	12 Cup: GL212
Mr. Coffee	FTTX85	12 Cup: GL312
Mr. Coffee	FTTX95	12 Cup: GL312
Mr. Coffee	FTX20	12 Cup: GL312
Mr. Coffee	FTX21	12 Cup: GL312
Mr. Coffee	FTX23	12 Cup: GL312
Mr. Coffee	FTX24	12 Cup: GL312
Mr. Coffee	FTX25-1	12 Cup: GL312
Mr. Coffee	FTX26-1	12 Cup: GL312
Mr. Coffee	FTX27	12 Cup: GL312
Mr. Coffee	FTX29	12 Cup: GL312
Mr. Coffee	FTX40	12 Cup: GL312
Mr. Coffee	FTX41	12 Cup: GL312
Mr. Coffee	FTX43	12 Cup: GL312
Mr. Coffee	FTX44	12 Cup: GL312
Mr. Coffee	FTX45	12 Cup: GL312
Mr. Coffee	FTX46	12 Cup: GL312

Mr. Coffee	FTX47	12 Cup: GL312
Mr. Coffee	FTX49	12 Cup: GL312
Mr. Coffee	FTXSS23GTF	12 Cup: GL312
Mr. Coffee	FTXSS43GTF	12 Cup: GL312
Mr. Coffee	FX25	12 Cup: GL312
Mr. Coffee	GBX12	12 Cup: GL220
Mr. Coffee	GBX20	12 Cup: GL212
Mr. Coffee	GBX23	12 Cup: GL312
Mr. Coffee	HCB50	4 Cup: GL204 4 Cup: SS404
Mr. Coffee	HCB50X	4 Cup: GL204 4 Cup: SS404
Mr. Coffee	HCB63	4 Cup: GL204 4 Cup: SS404
Mr. Coffee	ID40	4 Cup: GL204 4 Cup: SS404
Mr. Coffee	IDS	4 Cup: GL204 4 Cup: SS404
Mr. Coffee	IDS12	10 Cup: GL210 10 Cup: SS410
Mr. Coffee	ISS12	12 Cup: GL312
Mr. Coffee	ISS13	12 Cup: GL312
Mr. Coffee	ISTX95	12 Cup: GL312
Mr. Coffee	ISX12	12 Cup: GL312

Mr. Coffee	ISX20	12 Cup: GL312
Mr. Coffee	ISX23	12 Cup: GL312
Mr. Coffee	ISX23BP	12 Cup: GL312
Mr. Coffee	ISX26	12 Cup: GL312
Mr. Coffee	ISX3	12 Cup: GL312
Mr. Coffee	ISX40	12 Cup: GL312
Mr. Coffee	ISX43	12 Cup: GL312
Mr. Coffee	ISX46	12 Cup: GL312
Mr. Coffee	JR4	4 Cup: GL204 4 Cup: SS404
Mr. Coffee	JR40	4 Cup: GL204 4 Cup: SS404
Mr. Coffee	JR44	4 Cup: GL204 4 Cup: SS404
Mr. Coffee	MC1212	10 Cup: GL210 10 Cup: SS410
Mr. Coffee	MCS201	10 Cup: GL210 10 Cup: SS410
Mr. Coffee	MCS23	10 Cup: GL210 10 Cup: SS410
Mr. Coffee	MRX33	12 Cup: GL312
Mr. Coffee	NC12	12 Cup: GL212
Mr. Coffee	NC13	12 Cup: GL212
Mr. Coffee	NCS12	12 Cup: GL212



CARAFE FITS LIST

Mr. Coffee	NCS13	12 Cup: GL212
Mr. Coffee	NCX20	12 Cup: GL212
Mr. Coffee	NCX23	12 Cup: GL212
Mr. Coffee	NL5GTF	no fit
Mr. Coffee	PD123	12 Cup: GL220
Mr. Coffee	PL12	12 Cup: GL212
Mr. Coffee	PL13	12 Cup: GL212
Mr. Coffee	PLX20	12 Cup: GL212
Mr. Coffee	PLX20BP-2	12 Cup: GL212
Mr. Coffee	PLX23	12 Cup: GL212
Mr. Coffee	PLX23BP-2	12 Cup: GL212
Mr. Coffee	PLX26BP-2	12 Cup: GL212
Mr. Coffee	PR12A	12 Cup: GL220
Mr. Coffee	PR13	12 Cup: GL220
Mr. Coffee	PR14	12 Cup: GL220
Mr. Coffee	PR15	12 Cup: GL220
Mr. Coffee	PR16	12 Cup: GL220
Mr. Coffee	PR17	12 Cup: GL220

Mr. Coffee	PR4	4 Cup: GL204 4 Cup: SS404
Mr. Coffee	PR6	4 Cup: GL204 4 Cup: SS404
Mr. Coffee	PR6-D	4 Cup: GL204 4 Cup: SS404
Mr. Coffee	PRX20	12 Cup: GL220
Mr. Coffee	PRX23	12 Cup: GL220
Mr. Coffee	PRX30	12 Cup: GL220
Mr. Coffee	PRX30D	12 Cup: GL220
Mr. Coffee	PRX33	12 Cup: GL220
Mr. Coffee	RMX23	12 Cup: GL312
Mr. Coffee	SRX50	10 Cup: GL210 10 Cup: SS410
Mr. Coffee	SSP23	n/a single serve
Mr. Coffee	TF12	12 Cup: GL312
Mr. Coffee	TF13	12 Cup: GL312
Mr. Coffee	TF4	no fit
Mr. Coffee	TFS12	12 Cup: GL212
Mr. Coffee	TFTX85	n/a thermal carafe
Mr. Coffee	TFX Series	12 Cup: GL312
Mr. Coffee	TR4	4 Cup: GL204 4 Cup: SS404

Mr. Coffee	TR40	4 Cup: GL204 4 Cup: SS404
Mr. Coffee	TRX23	12 Cup: GL312
Mr. Coffee	TXX23	12 Cup: GL212
Mr. Coffee	UNX20	12 Cup: GL220
Mr. Coffee	UNX23	12 Cup: GL212 12 Cup: GL220
Mr. Coffee	UR12	12 Cup: GL220
Mr. Coffee	UR13	12 Cup: GL220
Mr. Coffee	UR17	12 Cup: GL220
Mr. Coffee	URX20	12 Cup: GL212 12 Cup: SS412 12 Cup: GL220
Mr. Coffee	URX23	12 Cup: GL220
Mr. Coffee	URX30	12 Cup: GL220
Mr. Coffee	URX33	12 Cup: GL212 12 Cup: GL220
Mr. Coffee	URX37	12 Cup: GL220
Mr. Coffee	US001	10 Cup: GL210 10 Cup: SS410 12 Cup: GL200
Mr. Coffee	UTC100	10 Cup: GL210 10 Cup: SS410 12 Cup: GL200
Mr. Coffee	UTC300	12 Cup: GL200
Mr. Coffee	UTC303	10 Cup: GL210 10 Cup: SS410
Mr. Coffee	VB12	12 Cup: GL212



CARAFE FITS LIST

Mr. Coffee	VB12	12 Cup: GL312
Mr. Coffee	VB13	12 Cup: GL312
Mr. Coffee	VBX20	12 Cup: GL312
Mr. Coffee	VBX23	12 Cup: GL312
Mr. Coffee Concepts	HCB50	4 Cup: GL204 4 Cup: SS404
Mr. Coffee Concepts	HCB50X	4 Cup: GL204 4 Cup: SS404
Mr. Coffee Concepts	HCB63	4 Cup: GL204 4 Cup: SS404
Mr. Coffee Concepts	JR40	4 Cup: GL204 4 Cup: SS404
Norelco	CT162	10 Cup: GL210 10 Cup: SS410 12 Cup: GL200
Norelco	CT663	12 Cup: GL200
Norelco	CT663eB	10 Cup: GL210 10 Cup: SS410 12 Cup: GL200 12 Cup: GL220
Norelco	Express HB5122	4 Cup: GL204 4 Cup: SS404
Norelco	HB5124	4 Cup: GL204 4 Cup: SS404
Norelco	HB5183	12 Cup: GL200
Norelco	HB5184	12 Cup: GL200
Norelco	HB5185	12 Cup: GL200 12 Cup: GL220
Norelco	HB5186	12 Cup: GL200
Norelco	HB5186-C	12 Cup: GL200

Norelco	HB5187	12 Cup: GL200
Phillips	HD Sensio	n/a no carafe
Proctor Silex	40104	4 Cup: GL204 4 Cup: SS404
Proctor Silex	40105	4 Cup: GL204 4 Cup: SS404
Proctor Silex	40188	4 Cup: GL204 4 Cup: SS404
Proctor Silex	41331	12 Cup: GL220
Proctor Silex	41334	12 Cup: GL220
Proctor Silex	41461	12 Cup: GL220
Proctor Silex	41464	12 Cup: GL220
Proctor Silex	42101	12 Cup: GL220
Proctor Silex	42114	n/a single serve
Proctor Silex	42301	12 Cup: GL220
Proctor Silex	42304	12 Cup: GL220
Proctor Silex	42331	12 Cup: GL220
Proctor Silex	42334	12 Cup: GL220
Proctor Silex	42371	12 Cup: GL220
Proctor Silex	42461	12 Cup: GL220
Proctor Silex	42464	12 Cup: GL220

Proctor Silex	43501	12 Cup: GL212
Proctor Silex	43531	12 Cup: GL220
Proctor Silex	43571	12 Cup: GL220
Proctor Silex	44301	n/a single serve
Proctor Silex	44401	10 Cup: GL210 10 Cup: SS410
Proctor Silex	46101	12 Cup: GL220
Proctor Silex	46104	12 Cup: GL220
Proctor Silex	46261	12 Cup: GL220
Proctor Silex	46385	12 Cup: GL220
Proctor Silex	46801	Coffeemaker unavailable for testing
Proctor Silex	46888	12 Cup: GL212
Proctor Silex	48134	4 Cup: GL204
Proctor Silex	48503	12 Cup: GL220
Proctor Silex	48521	12 Cup: GL220
Proctor Silex	48524	12 Cup: GL220
Proctor Silex	48561	12 Cup: GL220
Proctor Silex	48571	12 Cup: GL220
Proctor Silex	48574	no fit



CARAFE FITS LIST

Proctor Silex	92000	4 Cup: GL204 4 Cup: SS404
Proctor Silex	607HB	12 Cup: GL212 12 Cup: SS412
Proctor Silex	A100	10 Cup: GL210 10 Cup: SS410
Proctor Silex	A301	10 Cup: GL210 10 Cup: SS410
Proctor Silex	A302	10 Cup: GL210 10 Cup: SS410
Proctor Silex	A306	10 Cup: GL210 10 Cup: SS410
Proctor Silex	A415	12 Cup: GL200
Proctor Silex	A415AL	10 Cup: GL210 10 Cup: SS410 12 Cup: GL200
Proctor Silex	A416	10 Cup: GL210 10 Cup: SS410 12 Cup: GL200
Proctor Silex	A600	10 Cup: GL210 10 Cup: SS410 12 Cup: GL200
Proctor Silex	A6078	10 Cup: GL210 10 Cup: SS410 12 Cup: GL200 12 Cup: GL220
Proctor Silex	A607A	10 Cup: GL210 10 Cup: SS410 12 Cup: GL200 12 Cup: GL220
Proctor Silex	A6089	10 Cup: GL210 10 Cup: SS410 12 Cup: GL200 12 Cup: GL220
Proctor Silex	A617	10 Cup: GL210 10 Cup: SS410 12 Cup: GL200
Proctor Silex	A625	10 Cup: GL210 10 Cup: SS410 12 Cup: GL200
Proctor Silex	A635	10 Cup: GL210 10 Cup: SS410 12 Cup: GL200
Proctor Silex	A6378	12 Cup: GL220
Proctor Silex	A8004	4 Cup: GL204 4 Cup: SS404

Proctor Silex	A8335W	12 Cup: GL220
Proctor Silex	A8704	4 Cup: GL204 4 Cup: SS404
Proctor Silex	A8757	4 Cup: GL204 4 Cup: SS404
Proctor Silex	C40107	4 Cup: GL204 4 Cup: SS404
Proctor Silex	C40207	4 Cup: GL204 4 Cup: SS404
Proctor Silex	D40101	4 Cup: GL204 4 Cup: SS404
Regal	7567	12 Cup: GL200
Sunbeam	3278	4 Cup: GL204 4 Cup: SS404
Sunbeam	3279	4 Cup: GL204 4 Cup: SS404
Sunbeam	3280	4 Cup: GL204 4 Cup: SS404
Sunbeam	3289	4 Cup: GL204 4 Cup: SS404
Sunbeam	6385	12 Cup: GL220
Sunbeam	6000 Series	12 Cup: GL312
Sunbeam	HDX23	12 Cup: GL312
Toastmaster	TCM10PW	untested
Toastmaster	TCM12W	12 Cup: GL212
West Bend	55108	12 Cup: GL220 remove pause and serve
West Bend	55120	12 Cup: GL220 remove pause and serve

West Bend	56630	12 Cup: GL220
West Bend	56690	12 Cup: GL220
West Bend	56860	n/a thermal carafe
West Bend	56870	no fit
West Bend	56880	no fit